




# ZTE

## Dongle Installation for Windows


Plug the dongle, and wait for the **Join Air Wizard** to start

■ Click **Next**

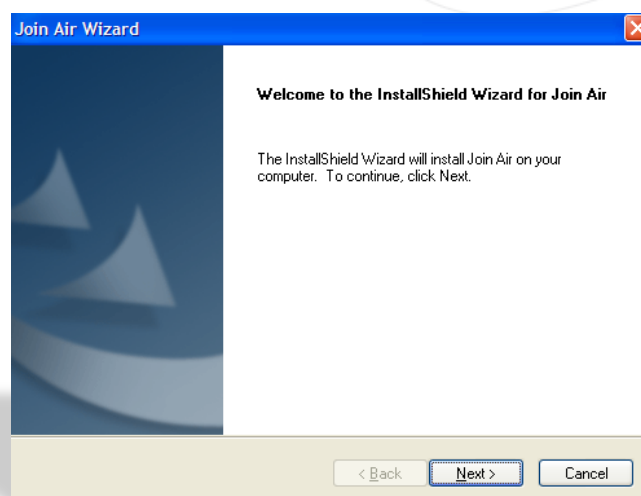

Choose Destination Location


■ Click **Next**

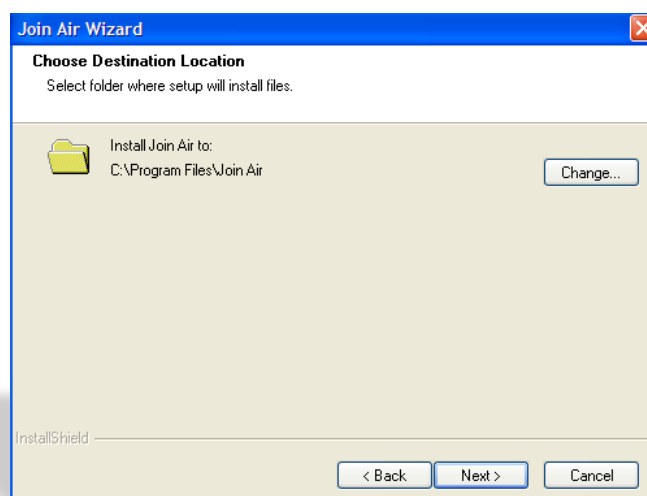




## Setup Status Page


- Wait for the download to finish

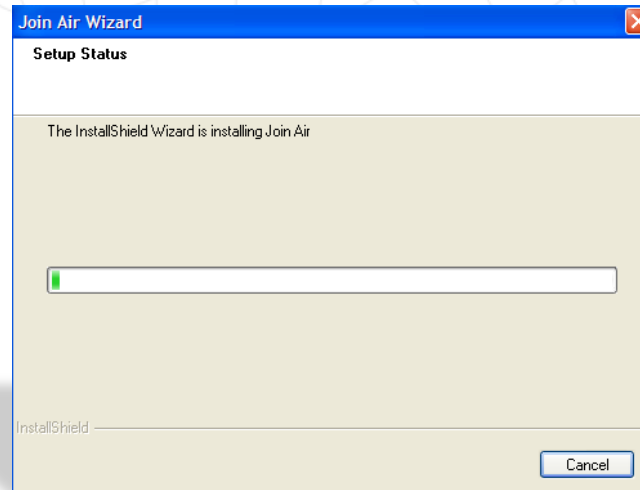

## Click Finish

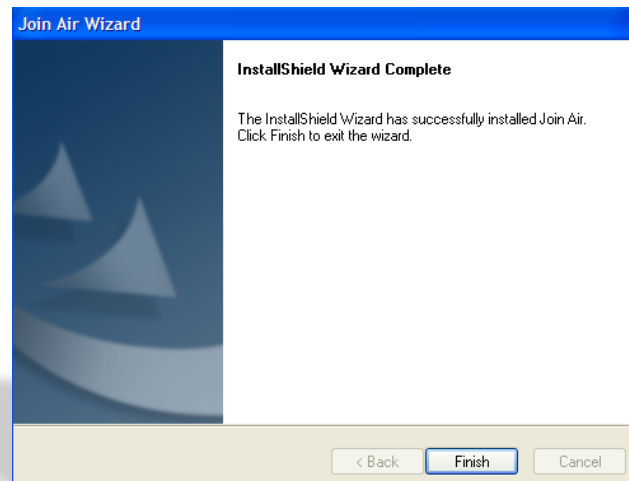

- The ZTE software will start automatically
- Enter the **SIM pin code** in the **PIN** page
  - Click **OK**

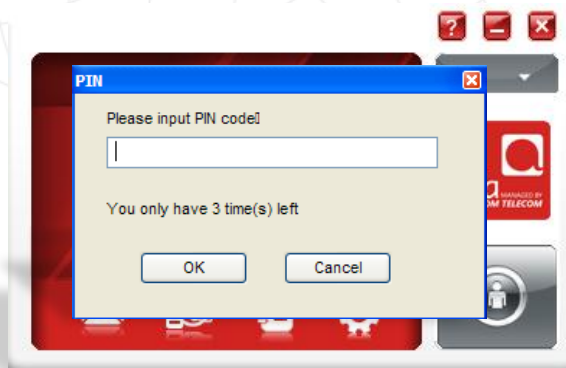


- On the homepage of the ZTE dashboard
- Click on **Settings**






## Settings window

- Select **Preference**
- Select **UMTS/HSPA Only**
- Click **Apply**

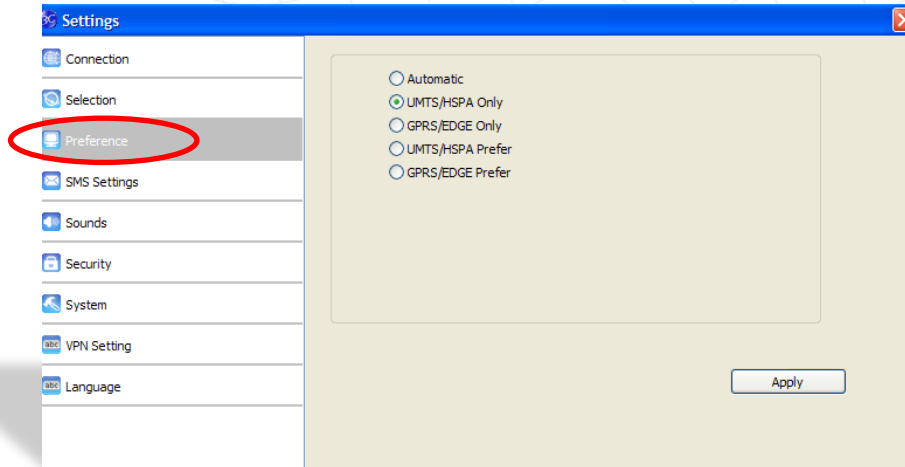

## Settings window

- Select **Connection**
- Click on **Add**

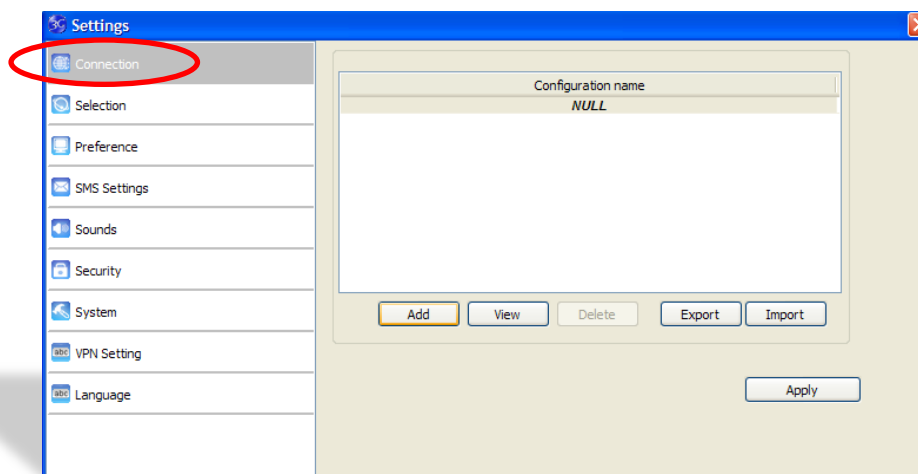



## Connection window

- Select **Common** tab
- Enter the information as follow
  - Config name: **3G**
  - Dial number: **\*99#**
  - APN select: **usb.mic1.com.lb**
- Click **Save**

A screenshot of the 'Connection' window. The 'Common' tab is selected. The 'Config File' section has 'Config name' set to '3G' and 'Dial number' set to '\*99#'. The 'APN' section has 'Obtain APN address automatically' selected. The 'User name' and 'Password' fields are empty. The 'Save' button is highlighted.

Connection

Common Advance

Config File

Config name: 3G

Dial number: \*99#

APN

☒ Obtain APN address automatically

☐ Use the following APN address

User name

Password

Save Cancel

## Click **OK**

A screenshot of the 'Connection' window showing the 'Set OK!' message. The 'OK' button is highlighted.

Connection

Set OK!

OK

## ZTE dashboard

- Click on the connect button

